
MMOC-PF Instructions

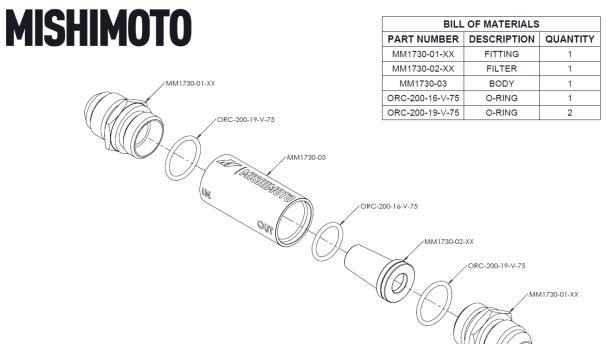

Install:

- 1. Lubricate the mating surfaces and threads of the fittings.
- 2. Install the In-Line Pre-Filter in the correct orientation.
- 3. Tighten the hose end connections to the In-Line Pre-Filter.

Maintenance:

- 1. Routine maintenance of the In-Line Pre-Filter is suggested to ensure component longevity.
- 2. Remove the In-Line Pre-Filter, then disassemble and inspect all its components.
- 3. Use a non-chlorinated brake parts cleaner, spraying from the inside-out, to clean the filter element.
- 4. Reassemble the In-Line Pre-Filter according to the diagram above, then reinstall it.