



INSTALLATION GUIDE


**BAFFLED OIL CATCH CAN KIT, FITS CHEVROLET/GMC 1500 5.3L/
6.2L 2014-2018 | SKU: MMBCC-K2-14**

TABLE OF CONTENTS

- Pg 01** RESOURCES & CONTACT INFORMATION
- Pg 02** EXPLODED DIAGRAM & PARTS BREAKDOWN
- Pg 03** IMPORTANT SAFETY INFORMATION
 - TOOLS NEEDED
 - INSTALLATION TIME
 - INSTALLATION DIFFICULTY
 - INSTALLATION INSTRUCTIONS
- Pg 04** DISPOSAL INSTRUCTIONS
 - WARRANTY INFORMATION

RESOURCES & CONTACT

-  **CALL 1-877-GOMISHI**
CUSTOMER SERVICE HOURS: MON-FRI 8:30AM-5:00PM EST
-  **MISHIMOTO**
-  **GOMISHIMOTO**
-  **MISHIMOTO**
-  **WEBSITE**
WWW.MISHIMOTO.COM
-  **ENGINEERING BLOG**
WWW.MISHIMOTO.COM/ENGINEERING

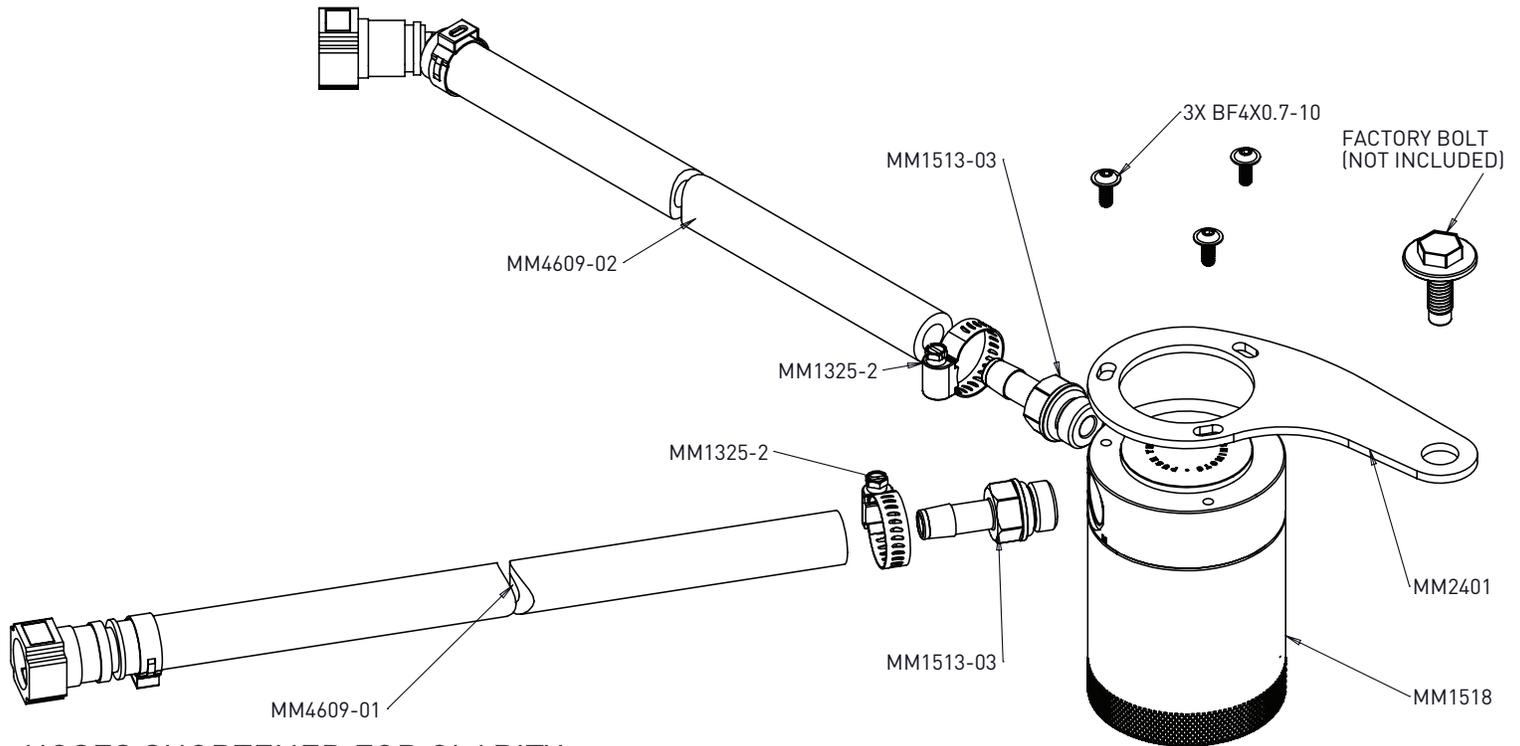

HOSES SHORTENED FOR CLARITY

PARTS BREAKDOWN

PART NUMBER	DESCRIPTION	QTY
MM1518	COMPACT CATCH CAN	1
MM2401	BRACKET	1
MM4609-01	PCV HOSE ASSEMBLY	1
MM4609-02	MANIFOLD HOSE ASSEMBLY	1
BF4X0.7-10B	BOLT	3
MM1513-03	FITTING	2
MM1325-2	WORM GEAR CLAMP	2

IMPORTANT SAFETY INFORMATION

- Mishimoto recommends you use safety glasses and protective gloves during the install of their products
- Raise vehicle only on jack stands or on a vehicle lift
- Allow vehicle to cool completely prior to attempting installation
- Do not run the engine or drive the vehicle while overheating; serious damage can occur
- Please dispose of any liquids properly
- Mishimoto is not responsible for any vehicle damage or personal injury due to installation errors, misuse, or removal of Mishimoto products
- If you need any assistance while installing our products, reach out to our Customer Service Team at 1-877-GOMISHI

INSTALLATION TIME **1 HOUR**

INSTALLATION DIFFICULTY

TOOLS NEEDED

2.5MM ALLEN KEY/ SOCKET	¼" RATCHET WRENCH AND/OR DRIVER
7MM ¼" SOCKET	
8MM ¼" SOCKET	17MM WRENCH
FLATHEAD SCREWDRIVER	


INSTALLATION INSTRUCTIONS

01. Remove factory air intake tube. Loosen clamp on throttle body and MAF (8MM driver or flathead screwdriver) and release 2X CCV hoses that go from the valve cover to the intake tube.

Remove the tube assembly from the vehicle.



02. Remove factory PCV hose from the vehicle by pushing down on the white tab on the fittings while pulling on the hose. Use caution removing these components as they can be damaged with excessive force.

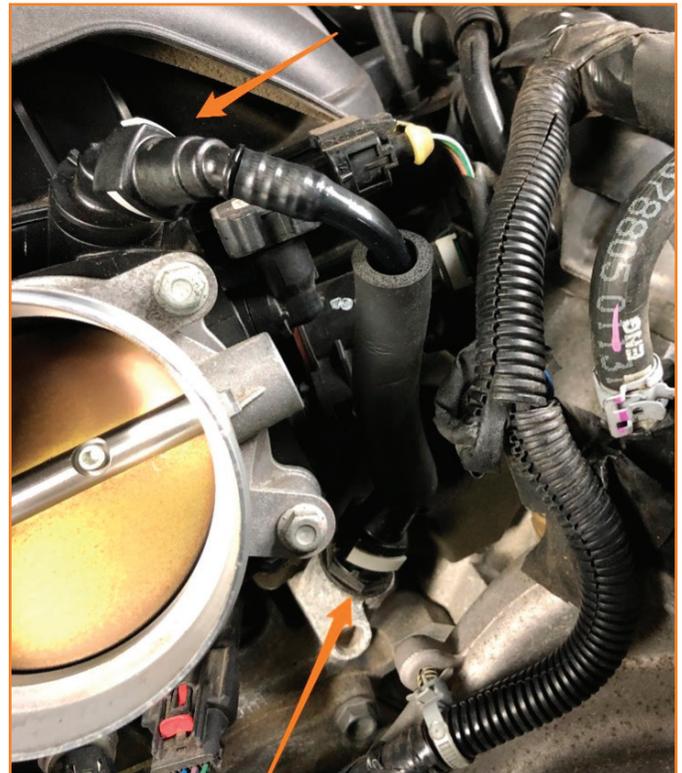

CONTINUED ON FOLLOWING PAGE

03. Install the 2X Fittings into the catch can and tighten with a 17mm wrench. Install the bracket onto the catch can using the 3X M4 Bolts as shown. Note the orientation of the fittings. Do not fully tighten the bolts at this time.




04. Locate and remove the 13mm bolt attaching the fender brace to the firewall on the driver's side of the engine bay. Install the catch can bracket under the bolt and tighten. Note the orientation of the bracket.



05. Route the hose with the 45-degree fitting from the male fitting on the intake manifold to the "OUT" fitting on the catch can and secure with the provided hose clamp. Route the hose underneath the wiring harness above the valve cover for a clean look. You may trim the open end of the hose if necessary.

06. Route the straight hose from the PCV fitting (under the throttle

body) to the "IN" fitting on the catch can and secure with the provided hose clamp. Route the hose underneath the wiring harness along with the other hose. You may trim the open end of the hose if necessary.

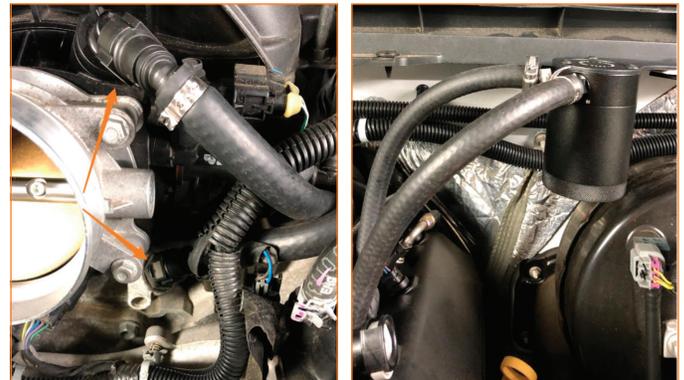

07. Adjust the orientation of the catch can and tighten the 3X 2.5mm allen head bolts.

08. Reinstall the factory intake air tube assembly.

Congratulations! You have finished your installation.

DISPOSAL INSTRUCTIONS

- › Do not dispose of any product as unsorted municipal waste. Use separate collection facilities. Contact your local authority for information regarding the collection systems available.
- › Never improperly dispose of any coolant, oil, or other chemicals.

WARRANTY INFORMATION



- › All claims must be accompanied with a picture of the Mishimoto product showing the issue for which the claim is being submitted.
- › Mishimoto asks that the customer inspect their purchased item for any damage immediately upon arrival.
- › Any product deemed dead on arrival (DOA) must be claimed within 14 business days of delivery. Claims outside of this time frame will not be covered under the Mishimoto Lifetime Warranty.
- › This warranty does not include payment and/or reimbursement of the cost of labor in connection with the removal of any product returned pursuant to the warranty policy or in connection with the installation of any replacement items provided under the warranty policy.
- › Mishimoto has the right to refuse a claim at any time.
- › When Mishimoto accepts a claim, Mishimoto retains full discretion to choose if it will: (i) repair or replace purchaser's original Mishimoto product; (ii) replace purchaser's original Mishimoto product with the most current available model; or (iii) provide the purchaser with a gift card redeemable on Mishimoto.com in the amount of the original purchase price of the original Mishimoto product. The provision of a replacement of a Mishimoto product is subject to availability and Mishimoto retains the right to substitute any warranty claim item with a comparable item or credit at any time.

- › If Mishimoto determines that it will provide a replacement item in connection with a claim under this warranty policy, and such item is out of stock, Mishimoto will place the customer on backorder and ship the replacement product to the purchaser once it becomes available.
- › Mishimoto is not liable for incorrect shipments in connection with a claim if a claim form is completed incorrectly, or if a model number is not included in a claim.
- › If you have a vehicle equipped with an automatic transmission, please make sure to specify this within the text box on the claim form. Mishimoto is not responsible for incorrect replacement shipments if transmission type is not indicated.



WARNING
Cancer and
Reproductive Harm
www.P65Warnings.ca.gov

This product can expose you to chemicals which are known to the state of California to cause cancer. For more information visit: www.p65warnings.ca.gov