

PARTS INCLUDED

- **1PC** Application-Specific Mounting Bracket
- 1PC Compact Baffled Oil Catch Can
- **4PC** Worm Gear Clamps
- **2PC** Direct-Fit Hoses
- 2PC 3/8" Aluminum Barbed Fittings Mounting Hardware

TOOLS NEEDED

7mm Socket 12mm Socket 17mm Wrench 1/4" Drive Ratchet 2.5mm Allen Key Pliers

INSTALL TIME 1 1/2 Hours INSTALL DIFFICULTY

DISCLAIMER

- Allow vehicle to cool completely prior to attempting installation.
- Mishimoto is not responsible for any vehicle damage or personal injury due to installation errors, misuse, or removal of Mishimoto products.
- Mishimoto suggests that a trained professional install all Mishimoto products.

INSTALL PROCEDURE

- 1. Remove the engine cover.
- 2. Remove the bolts on the intercooler bracket. (2x 12mm bolts)




3. Install the catch can bracket to the intercooler bracket. Use the bolts you removed in the last step to secure the bracket. (2x 12mm bolts)



- 4. Lubricate the O-ring inside your catch can. Then lubricate the fittings for the catch can.
- 5. Thread the fittings onto the catch can. Snug them down using a 17mm wrench.
- 6. Remove the hardware at the top of the catch can. (3x 2.5mm Allen bolts)
- 7. Install the catch can to the bracket. Use the same bolts you just removed to secure the can. (3x 2.5mm Allen bolts)



8. Remove the PCV hose. Compress the clamps on each end to free it. You will need to reach under and around nearby lines to get to the hose.

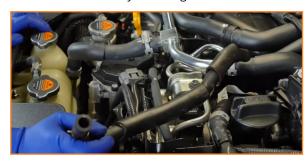

CONTINUED ON FOLLOWING PAGE

01



9. Run the outlet hose, which is the one with no bends, to the port on the intake manifold. Install it to the port. (1x worm gear clamp)



10. Attach the other end of the outlet hose to the catch can OUT port. (1x worm gear clamp)



- 11. Install the inlet hose to the valve cover and the catch can IN port. (2x worm gear clamps)
- 12. Reinstall the engine cover.

Congratulations! You have finished installing the Mishimoto 2016+ Infiniti Q50/Q60 Direct-Fit Catch Can.