

CHEVROLET CAMARO 2.0T 2016+/ CADILLAC ATS 2.0T 2013+ SILICONE INDUCTION HOSE PARTS LIST & INSTALLATION GUIDE



PARTS INCLUDED

- 1PC** Silicone Hose w/ Pre-Installed CNC Fitting
- 2PC** Metal Tool for removing stock fitting
- 2PC** Worm Gear Clamps

TOOLS NEEDED

- 1/4" Ratchet
- 6" Extension
- 7mm Deep Socket
- 8mm Wrench
- Flathead Screwdriver
- Pick Tools (for 2017+ models)

INSTALL TIME 15 Minutes

INSTALL DIFFICULTY

DISCLAIMER

- Allow vehicle to cool completely prior to attempting installation.
- Mishimoto is not responsible for any vehicle damage or personal injury due to installation errors, misuse, or removal of Mishimoto products.
- Mishimoto suggests that a trained professional install all Mishimoto products.

INSTALL PROCEDURE


1. Disconnect the MAF sensor from the induction hose. To do this, lift the red tab at the back of the sensor then depress the black tab.



2. Separate the crankcase ventilation (CCV) hose from the induction hose. If you're working on a 2013+ Cadillac ATS or 2016+ Camaro 2.0T, then you will lift the small black tab on the connector and slide it over before pulling the hose off the port. For 2017+ models, there is a non-removable clip. Use the provided pick tools to slide under the connector and depress the two tabs inside.



3. Loosen the two worm gear clamps securing the induction hose to the airbox and turbo. (2x worm gear clamps)

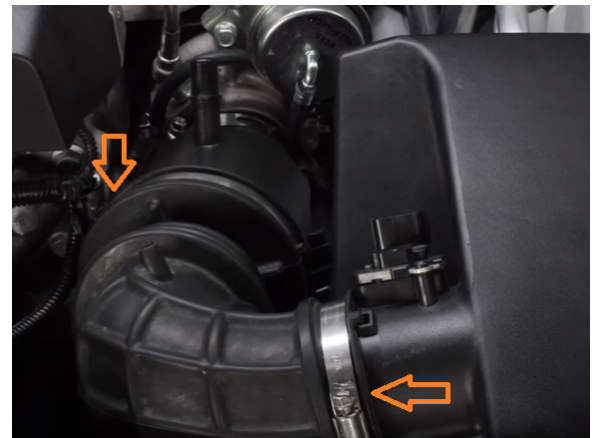

4. Remove the stock induction hose.
5. Slide the provided clamps over each end of the Mishimoto induction hose. The larger clamp goes over the end of the induction hose that will connect to the airbox, and the smaller clamp is for the other side that connects to the turbo. (2x worm gear clamps)

CONTINUED ON FOLLOWING PAGE

01

**CHEVROLET CAMARO 2.0T 2016+/
CADILLAC ATS 2.0T 2013+
SILICONE INDUCTION HOSE
INSTALLATION GUIDE**



6. Install the Mishimoto induction hose. Make sure both connections are fully seated.



7. Tighten both clamps to secure the induction hose. Do not over tighten these clamps or you will strip them.
8. Reconnect the crankcase ventilation (CCV) hose.
9. Reconnect the MAF sensor. Once the sensor is on, press down on the red locking tab to secure the connection.

Congratulations! You have finished installing the Mishimoto Chevrolet 2.0T 2016+ / Cadillac ATS 2.0T 2013+ Silicone Induction Hose.